
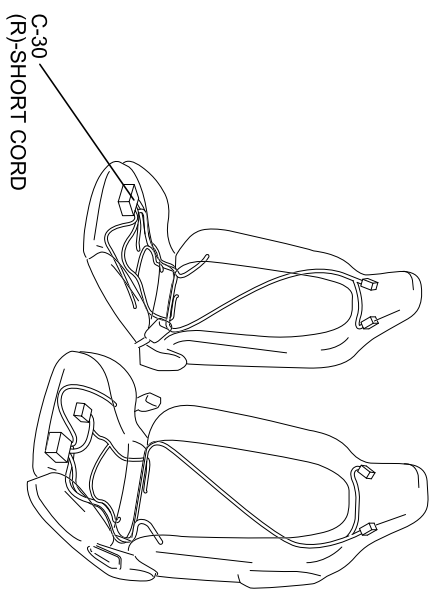



Occupant classification sensor terminal voltage table (reference)					
Terminal	Measurement conditions				Voltage (V)
2A	Under any condition				1.0 or less
2B	Ignition switched ON (engine off)				B+
	Ignition switched OFF (LOCK)				1.0 or less
4A	Terminal used for communication therefore determination based on terminal voltage is not possible.				
4B	Terminal used for communication therefore determination based on terminal voltage is not possible.				

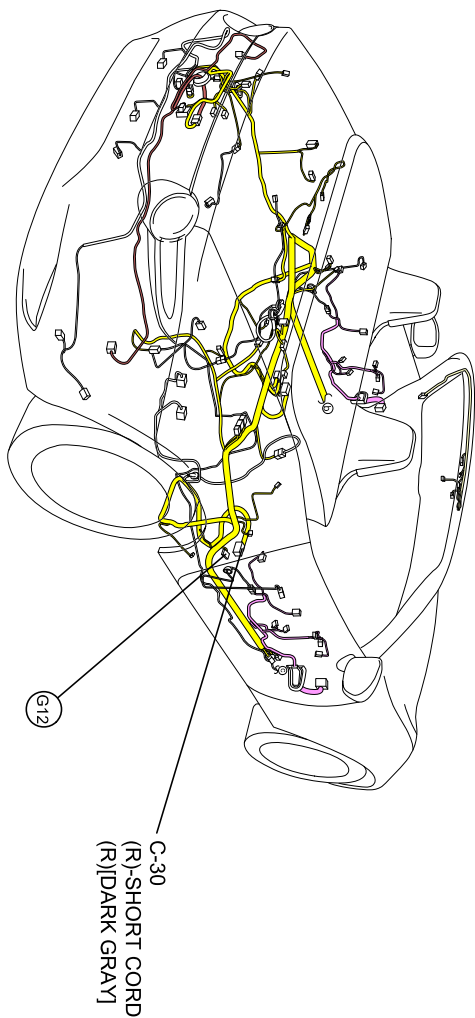

- REAR HARNESS
- REAR No.4 HARNESS
- DOOR HARNESS
- INTERIOR LIGHT No.2 HARNESS