 
 
 
 

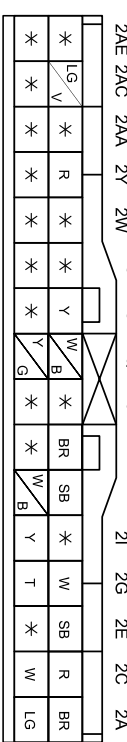
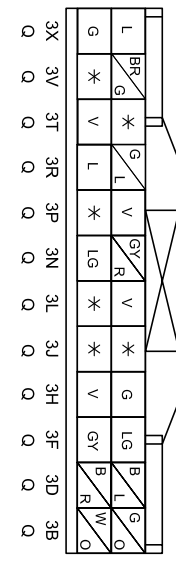
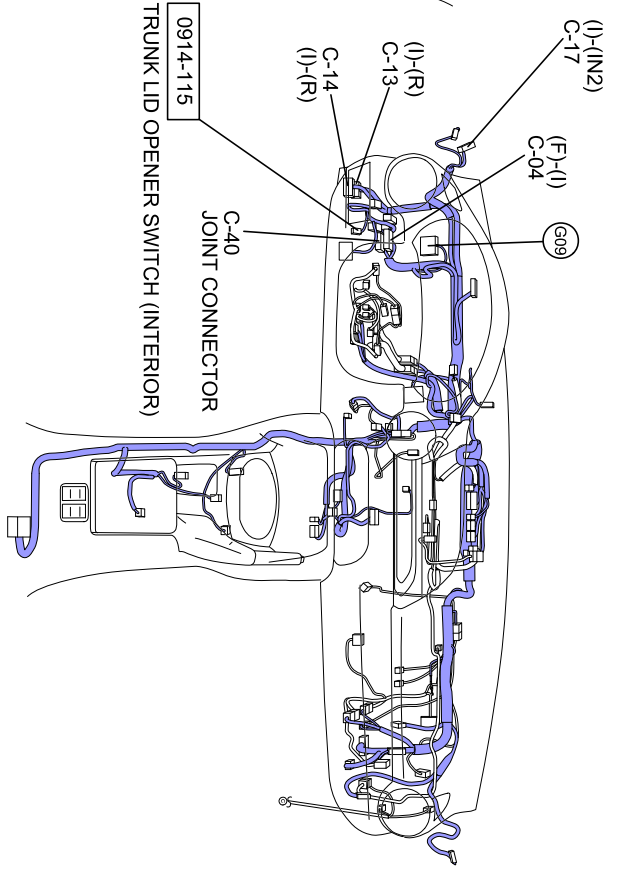
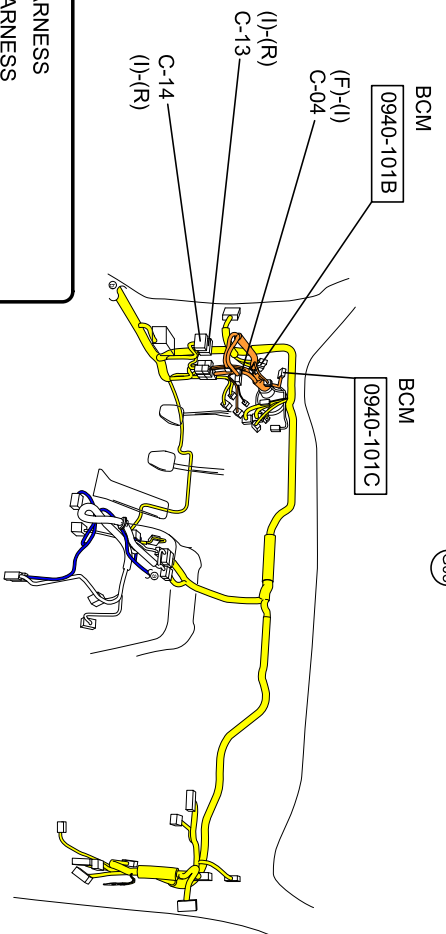
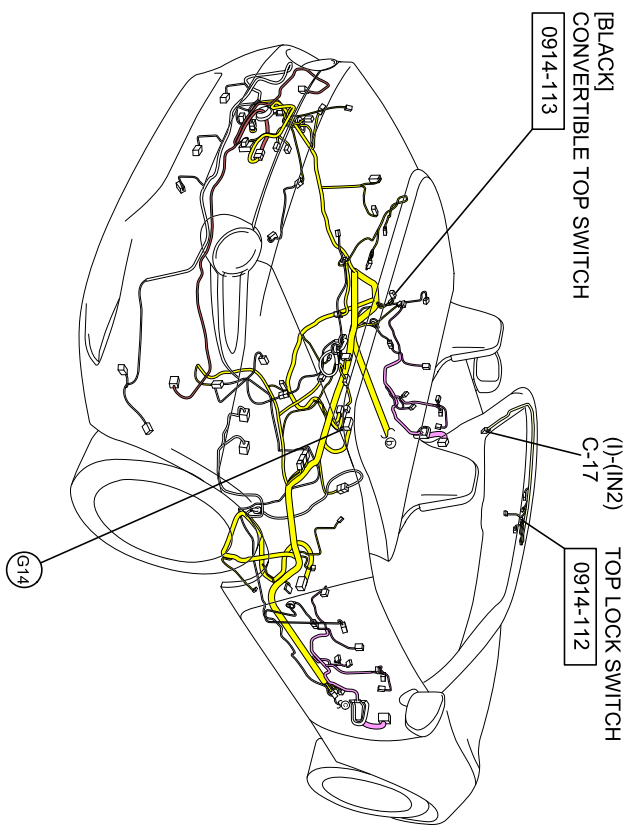


0914-111 HOOD LATCH SWITCH 	0914-112 TOP LOCK SWITCH 	0914-113 CONVERTIBLE TOP SWITCH 	0914-115 TRUNK LID OPENER SWITCH (INTERIOR) 
0940-101B BCM 			0940-101C BCM 

Body control module (BCM) terminal voltage table (reference)

Terminal	Measurement condition	Voltage (V)
2E	Convertible top is open	1.0 or less
	Convertible top is closed	Approx. 9.5
3U	Trunk lid opener switch (interior) is on (trunk lid opener switch (interior) is pressed)	1.0 or less
	Trunk lid opener switch (interior) is off (trunk lid opener switch (interior) is not pressed)	B+
3W*5	Hood is open	Approx. 9.0
	Hood is closed	1.0 or less

*5 :With hood latch switch

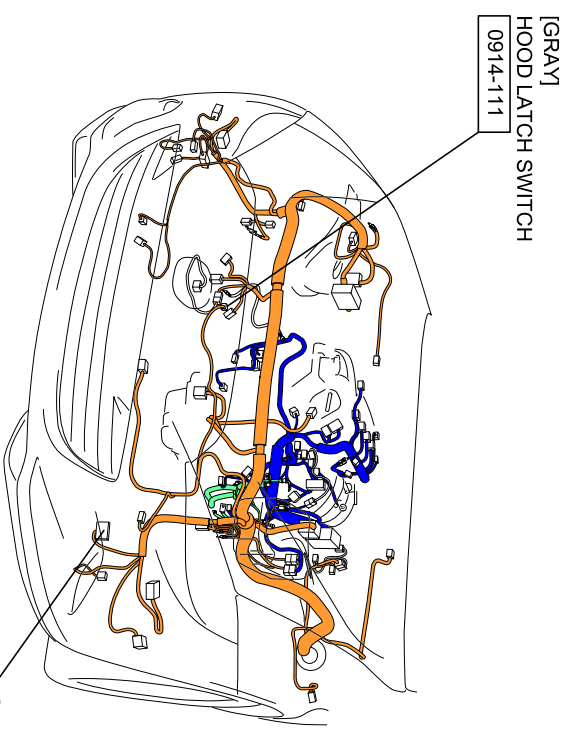

- : FRONT HARNESS
- : ENGINE HARNESS
- : ENGINE No.2 HARNESS
- : REAR HARNESS
- : REAR No.4 HARNESS
- : INSTRUMENT PANEL HARNESS
- : EMISSION HARNESS
- : DOOR HARNESS
- : INTERIOR LIGHT No.2 HARNESS