


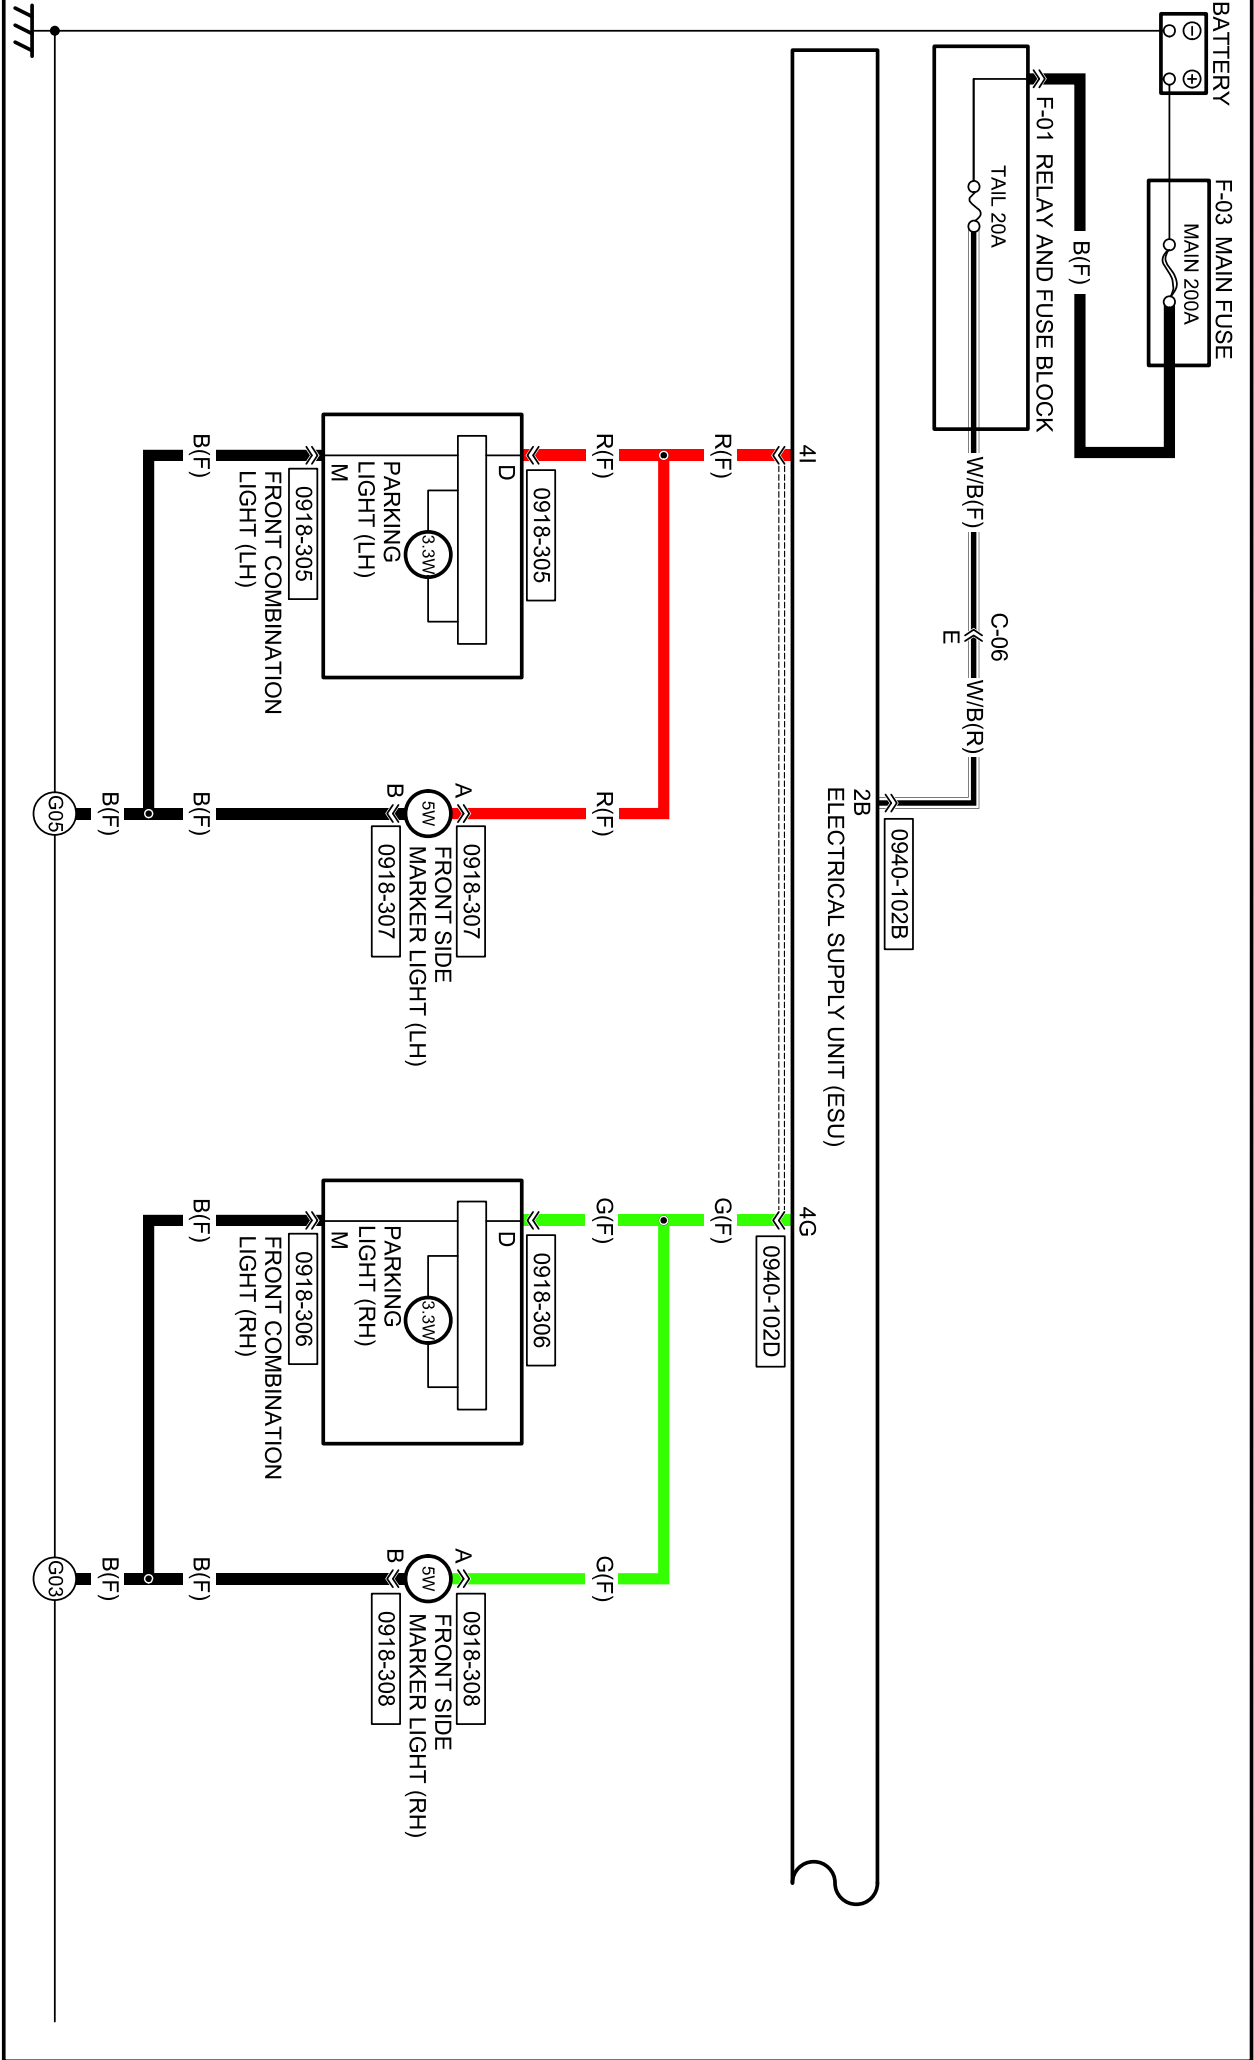

0918-3a

0918-305	FRONT COMBINATION LIGHT (LH) / HEADLIGHT LEVELING ACTUATOR (LH) / SWIVEL ACTUATOR (LH)
0918-306	FRONT COMBINATION LIGHT (RH) / HEADLIGHT LEVELING ACTUATOR (RH) / SWIVEL ACTUATOR (RH)
0918-307	FRONT SIDE MARKER LIGHT (LH)
0918-308	FRONT SIDE MARKER LIGHT (RH)
0940-102B	ELECTRICAL SUPPLY UNIT (ESU)
0940-102D	ELECTRICAL SUPPLY UNIT (ESU)

Electrical supply unit (ESU) Terminal Voltage Table (Reference)

Terminal	Measurement condition	Voltage (V)
2B	Under any condition	B+
4G	Ignition is switched ON (engine off or on)	B+
	Light switch is in parking light position	1.0 or less
	Light switch is in position other than parking light position	B+
4I	Ignition is switched ON (engine off or on)	1.0 or less
	Light switch is in position other than parking light position	

