


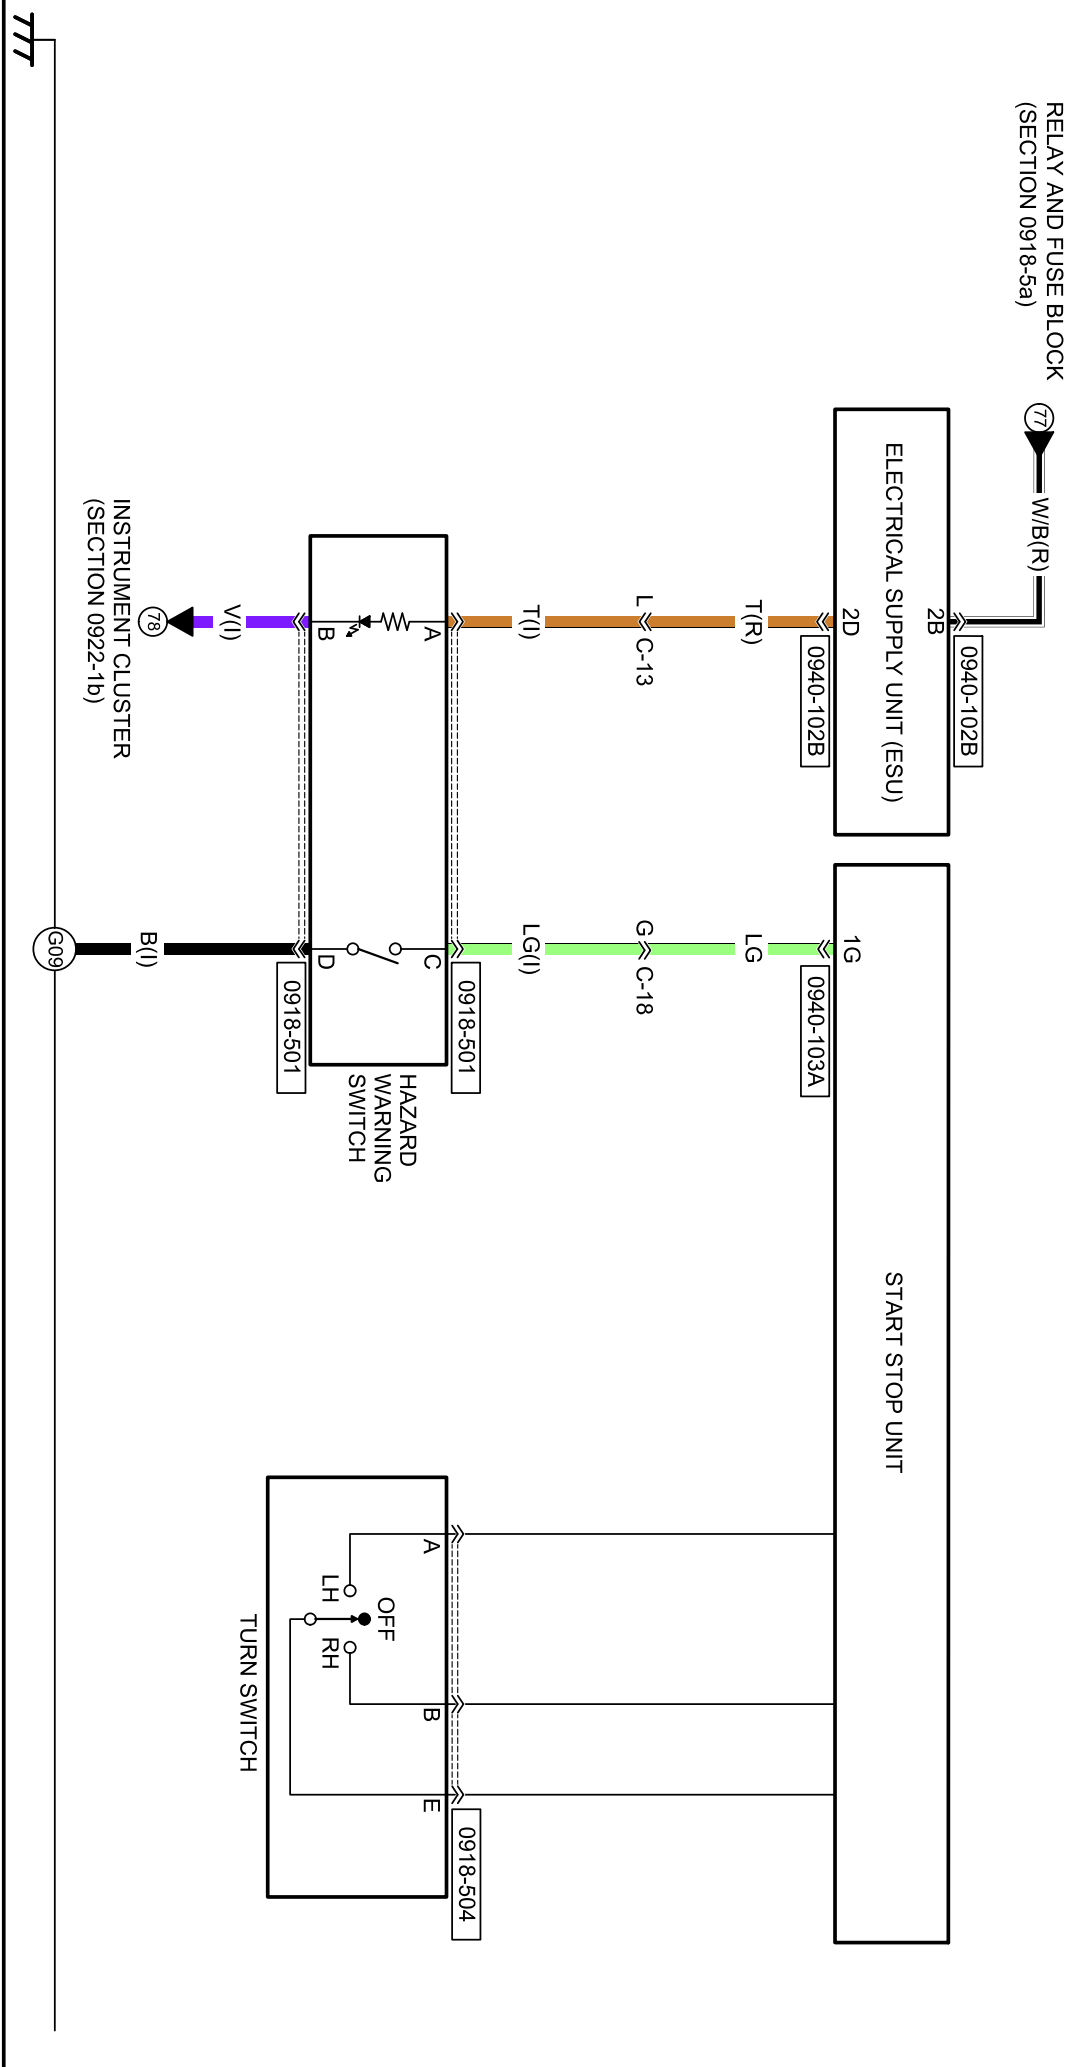

2016 Mazda MX-5 TURN AND HAZARD WARNING LIGHT

0918-5b

0918-504
LIGHT SWITCH /
TURN SWITCH

K	*	I	*	*	F	E	D	C	B	A
J H G										

0940-102B
ELECTRICAL SUPPLY UNIT (ESU)

2Q	2N	2K	2H	2E	2B
2R	2O	2L	2I	2F	2C
R Q Q Q Q R					

0918-504
LIGHT SWITCH /
TURN SWITCH

K	*	I	*	*	F	E	D	C	B	A
J H G										

0940-102B
ELECTRICAL SUPPLY UNIT (ESU)

2Q	2N	2K	2H	2E	2B
2R	2O	2L	2I	2F	2C
R Q Q Q Q R					

0918-504
LIGHT SWITCH /
TURN SWITCH

K	*	I	*	*	F	E	D	C	B	A
J H G										

0940-102B
ELECTRICAL SUPPLY UNIT (ESU)

2Q	2N	2K	2H	2E	2B
2R	2O	2L	2I	2F	2C
R Q Q Q Q R					

0918-504
LIGHT SWITCH /
TURN SWITCH

K	*	I	*	*	F	E	D	C	B	A
J H G										

0940-102B
ELECTRICAL SUPPLY UNIT (ESU)

2Q	2N	2K	2H	2E	2B
2R	2O	2L	2I	2F	2C
R Q Q Q Q R					

0918-504
LIGHT SWITCH /
TURN SWITCH

K	*	I	*	*	F	E	D	C	B	A
J H G										

0940-102B
ELECTRICAL SUPPLY UNIT (ESU)

2Q	2N	2K	2H	2E	2B
2R	2O	2L	2I	2F	2C
R Q Q Q Q R					

0918-504
LIGHT SWITCH /
TURN SWITCH

K	*	I	*	*	F	E	D	C	B	A
J H G										

0940-102B
ELECTRICAL SUPPLY UNIT (ESU)

2Q	2N	2K	2H	2E	2B
2R	2O	2L	2I	2F	2C
R Q Q Q Q R					

0918-504
LIGHT SWITCH /
TURN SWITCH

K	*	I	*	*	F	E	D	C	B	A
J H G										

0940-102B
ELECTRICAL SUPPLY UNIT (ESU)

2Q	2N	2K	2H	2E	2B
2R	2O	2L	2I	2F	2C
R Q Q Q Q R					

0918-504
LIGHT SWITCH /
TURN SWITCH

K	*	I	*	*	F	E	D	C	B	A
J H G										

0940-102B
ELECTRICAL SUPPLY UNIT (ESU)

2Q	2N	2K	2H	2E	2B
2R	2O	2L	2I	2F	2C
R Q Q Q Q R					

0918-504
LIGHT SWITCH /
TURN SWITCH



K	*	I	*	*	F	E	D	C	B	A
J H G										

0940-102B
ELECTRICAL SUPPLY UNIT (ESU)

2Q	2N	2K	2H	2E	2B
2R	2O	2L	2I	2F	2C

Electrical supply unit (ESU) Terminal Voltage Table (Reference)

Terminal	Measurement condition		Voltage (V)
2B	Under any condition		B+
2D	Ignition is switched ON (engine off or on)	Light switch is in ON position	B+
		Light switch is in OFF position	Voltage changes according to the tester specification, therefore determination is not possible.
Start stop unit terminal voltage table (reference)			
Terminal	Measurement conditions		Voltage (V)
1G	Hazard warning switch not pressed (OFF)		B+
	Hazard warning switch pressed (ON)		1.0 or less

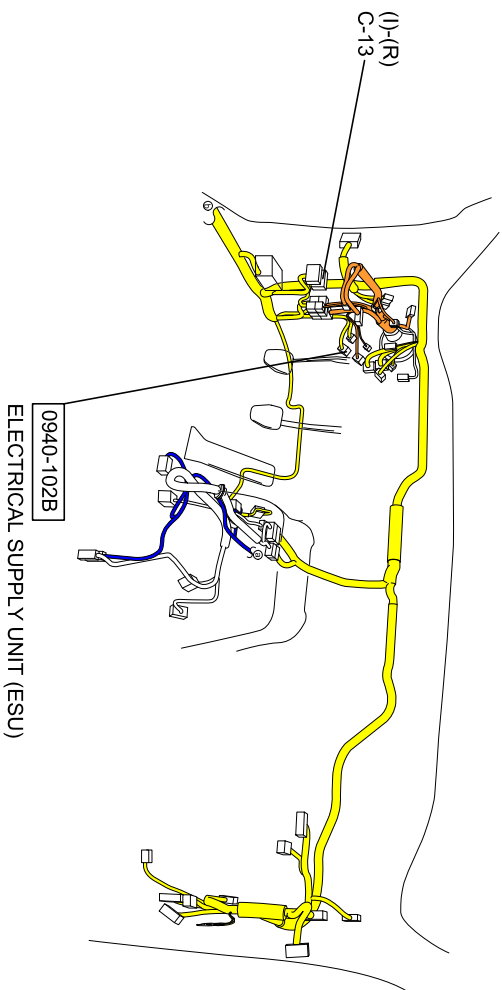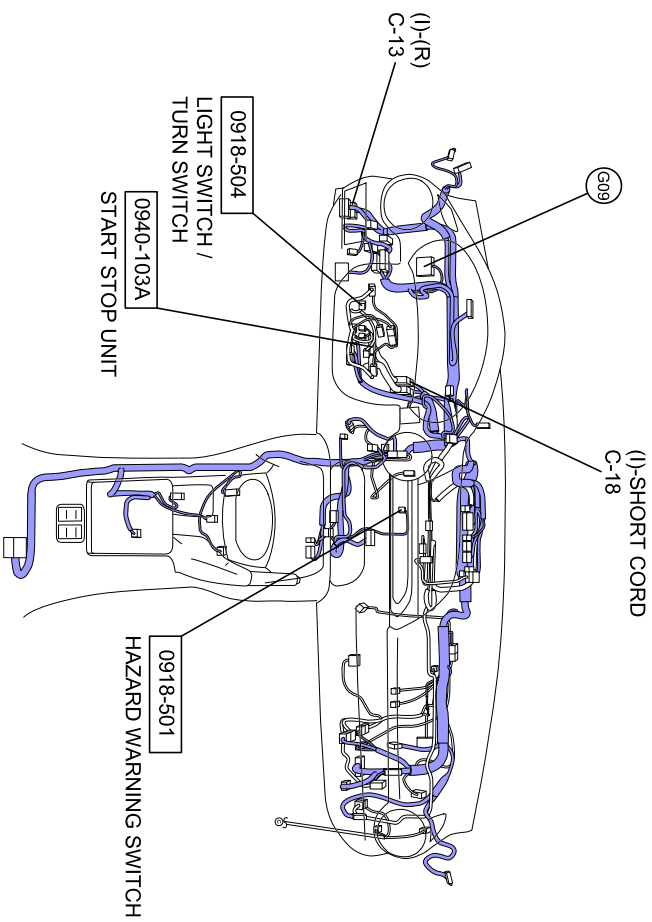

	: FRONT HARNESS
	: EMISSION HARNESS
	: REAR HARNESS
	: INSTRUMENT PANEL HARNESS