
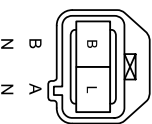
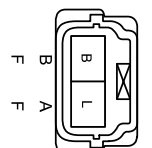
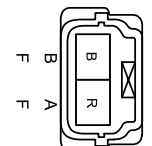
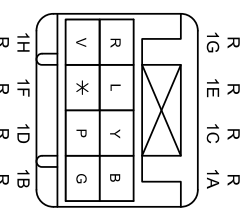
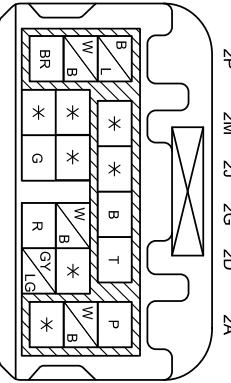


777


<p>0918-601 BACK-UP LIGHT SWITCH</p> 	<p>0918-602 BACK-UP LIGHT (LH)</p> 	<p>0918-603 BACK-UP LIGHT (RH)</p> 	<p>0940-102A ELECTRICAL SUPPLY UNIT (ESU)</p> 	<p>0940-102B ELECTRICAL SUPPLY UNIT (ESU)</p> 
---	--	--	---	---

Electrical supply unit (ESU) Terminal Voltage Table (Reference)

Terminal	Measurement condition		Voltage (V)
1H	Ignition is switched ON (engine off or on)	The ignition is switched off (LOCK)	B+
	The ignition is switched off (LOCK)		1.0 or less
2Q	Ignition is switched ON (engine off or on)		B+
	Ignition is switched ON (engine off or on)		1.0 or less

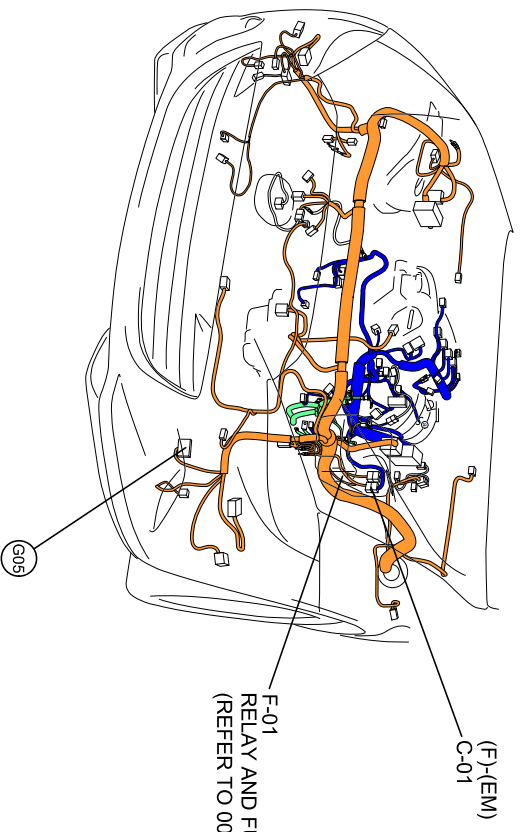



0918-602
BACK-UP LIGHT (LH)
[BLACK]

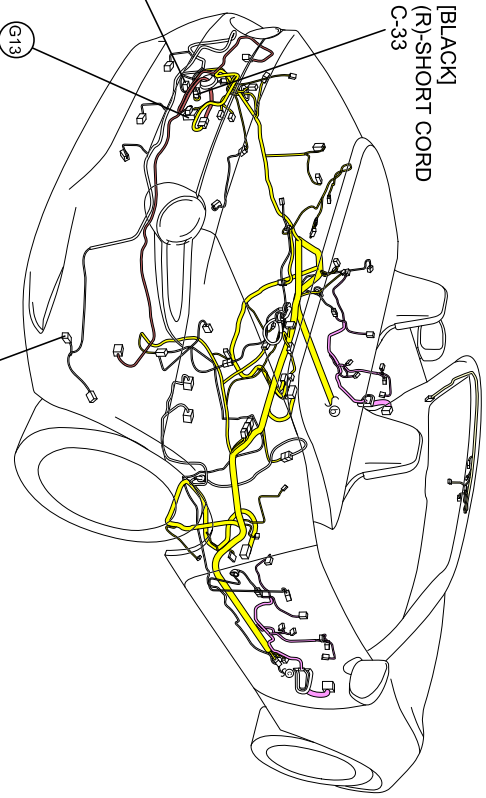

0918-603
BACK-UP LIGHT (RH)
[BLACK]

ELECTRICAL SUPPLY UNIT (ESU)
0940-102A

ELECTRICAL SUPPLY UNIT (ESU)
0940-102B

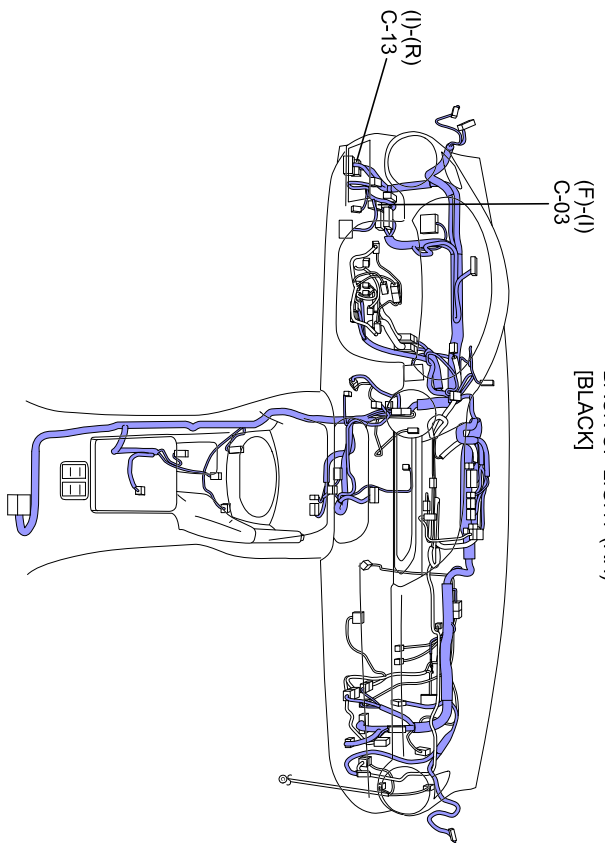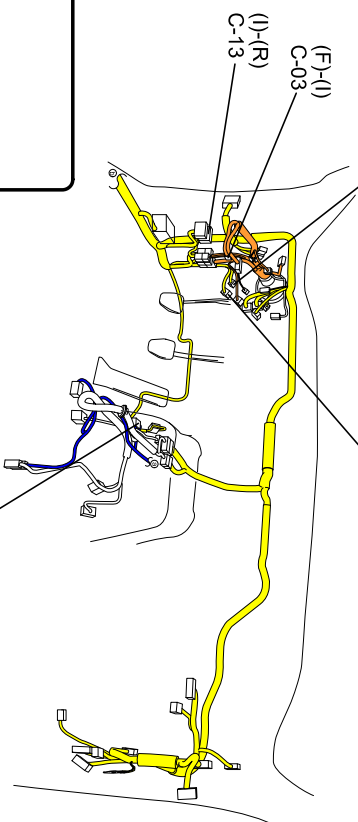

- : FRONT HARNESS
- : ENGINE HARNESS
- : ENGINE No.2 HARNESS
- : REAR HARNESS
- : REAR No.4 HARNESS
- : INSTRUMENT PANEL HARNESS
- : DOOR HARNESS
- : INTERIOR LIGHT No.2 HARNESS