
 
 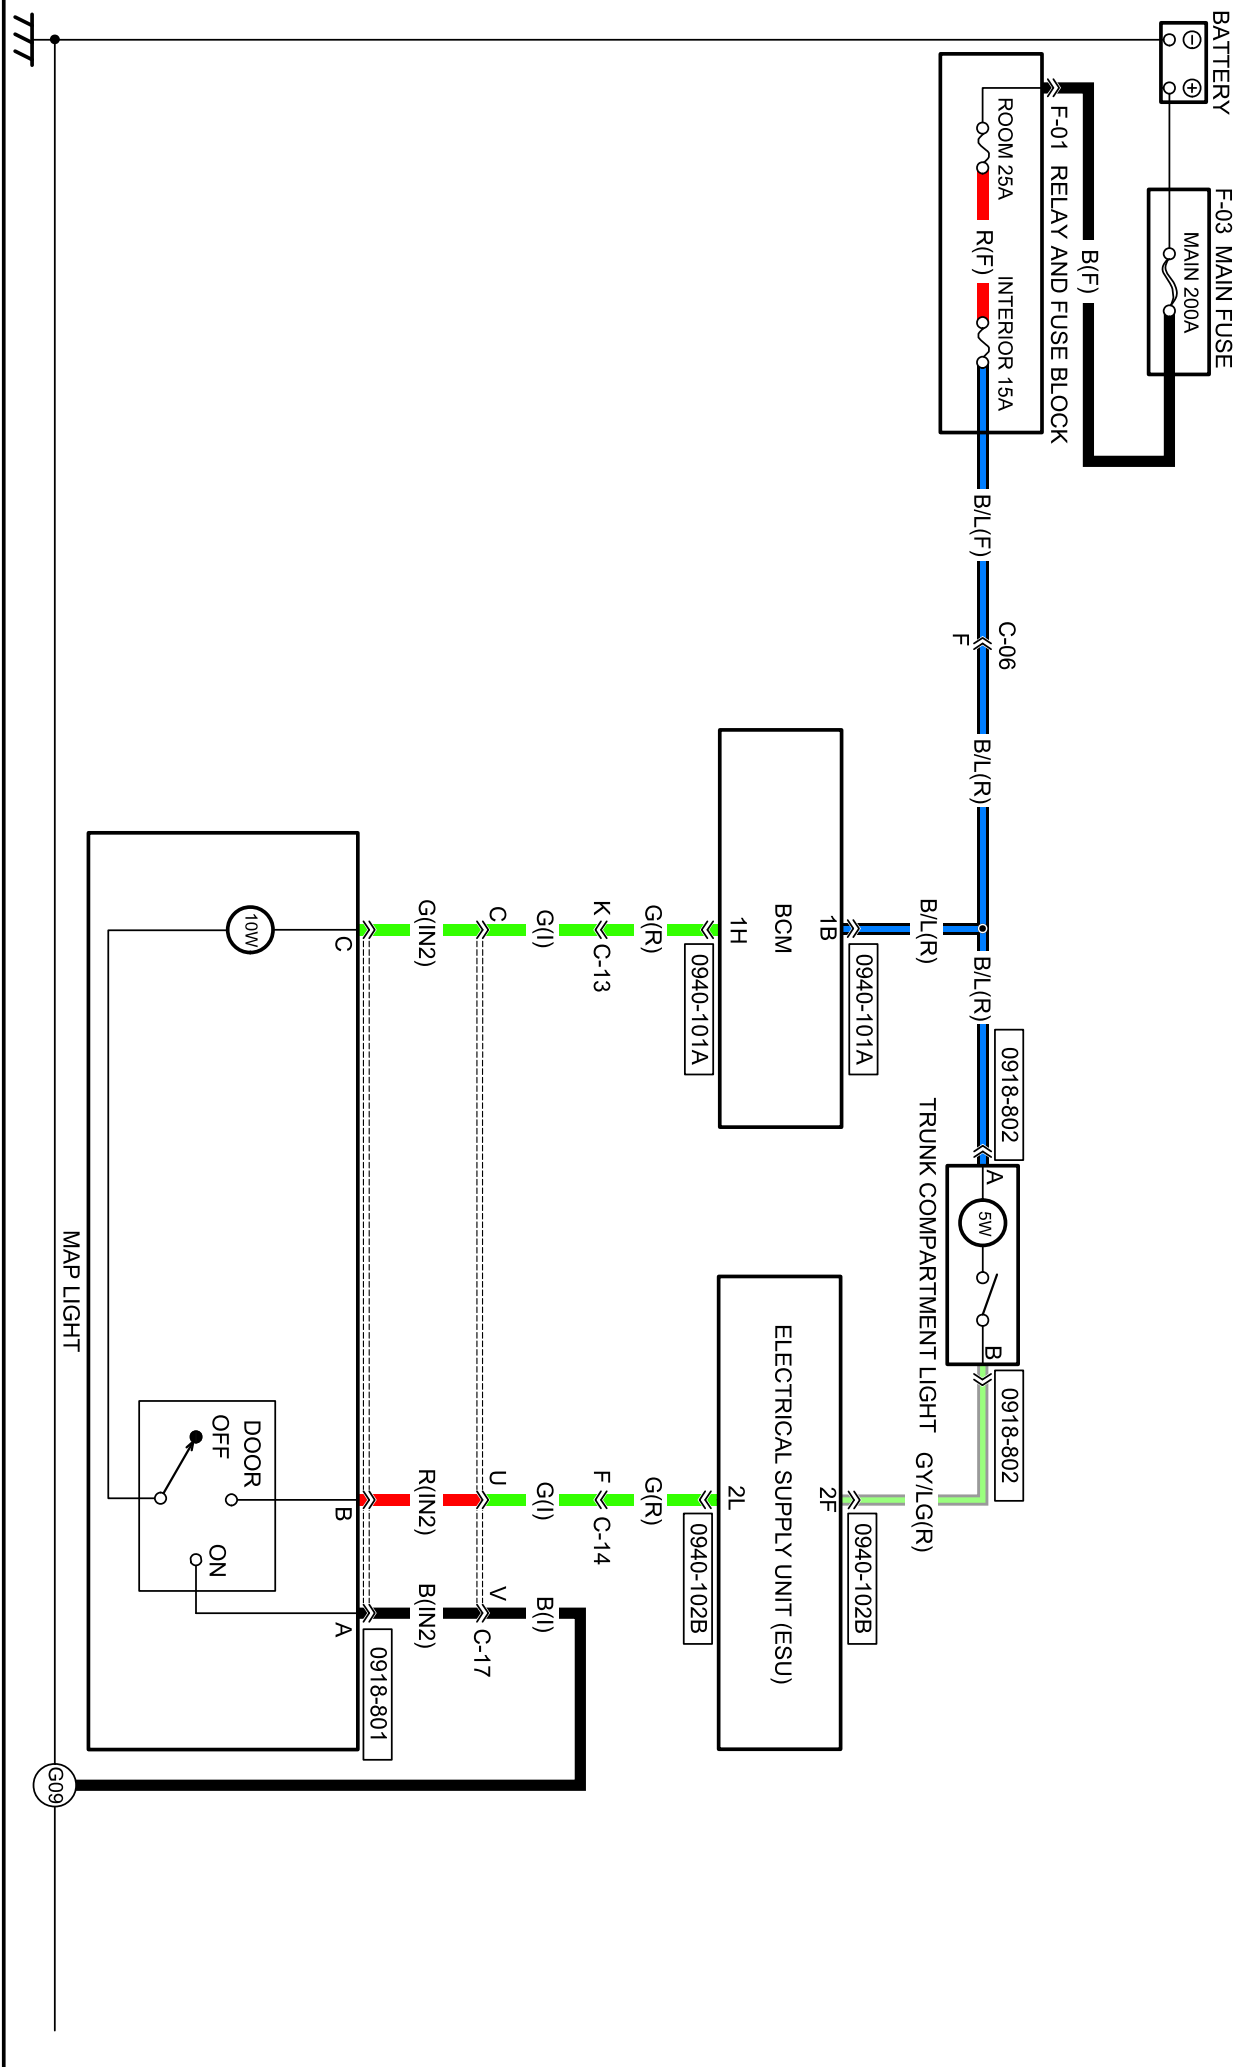


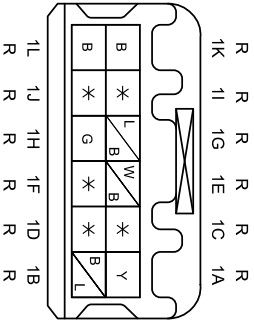
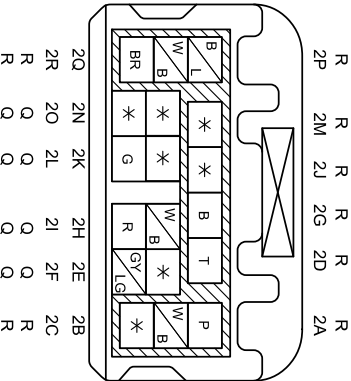


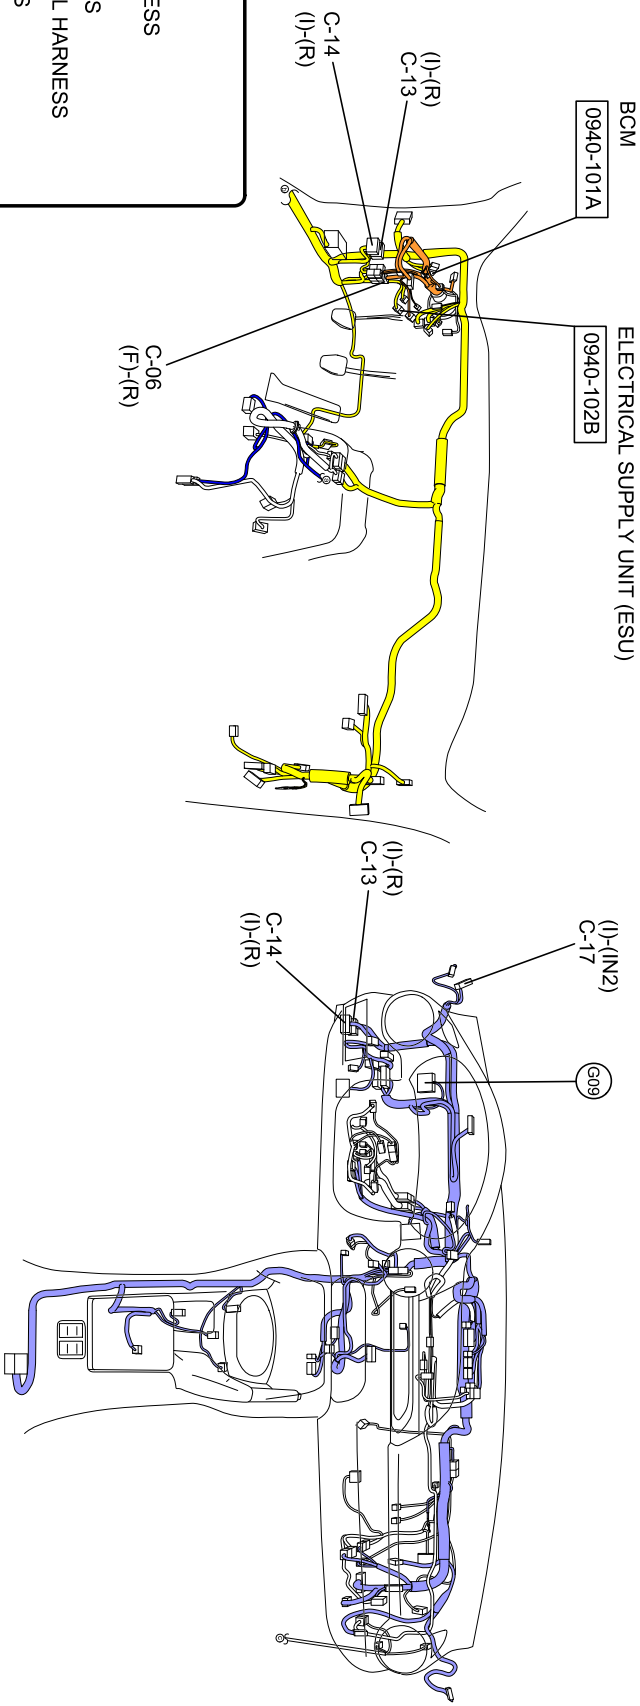

0918-801 MAP LIGHT	0918-802 TRUNK COMPARTMENT LIGHT	0940-101A BCM	0940-102B ELECTRICAL SUPPLY UNIT (ESU)	
				
				

Body control module (BCM) terminal voltage table (reference)			
Terminal		Measurement condition	Voltage (V)
1B		Under any condition	B+
1H		Under any condition	B+
Electrical supply unit (ESU) Terminal Voltage Table (Reference)			
Terminal		Measurement condition	Voltage (V)
2F		Ignition is switched ON (engine off or on) and trunk compartment light switched on	1.0 or less
		Trunk is closed	B+
		Interior light switch is in DOOR position and door is open	1.0 or less
2L		Ignition is switched ON (engine off or on)	B+

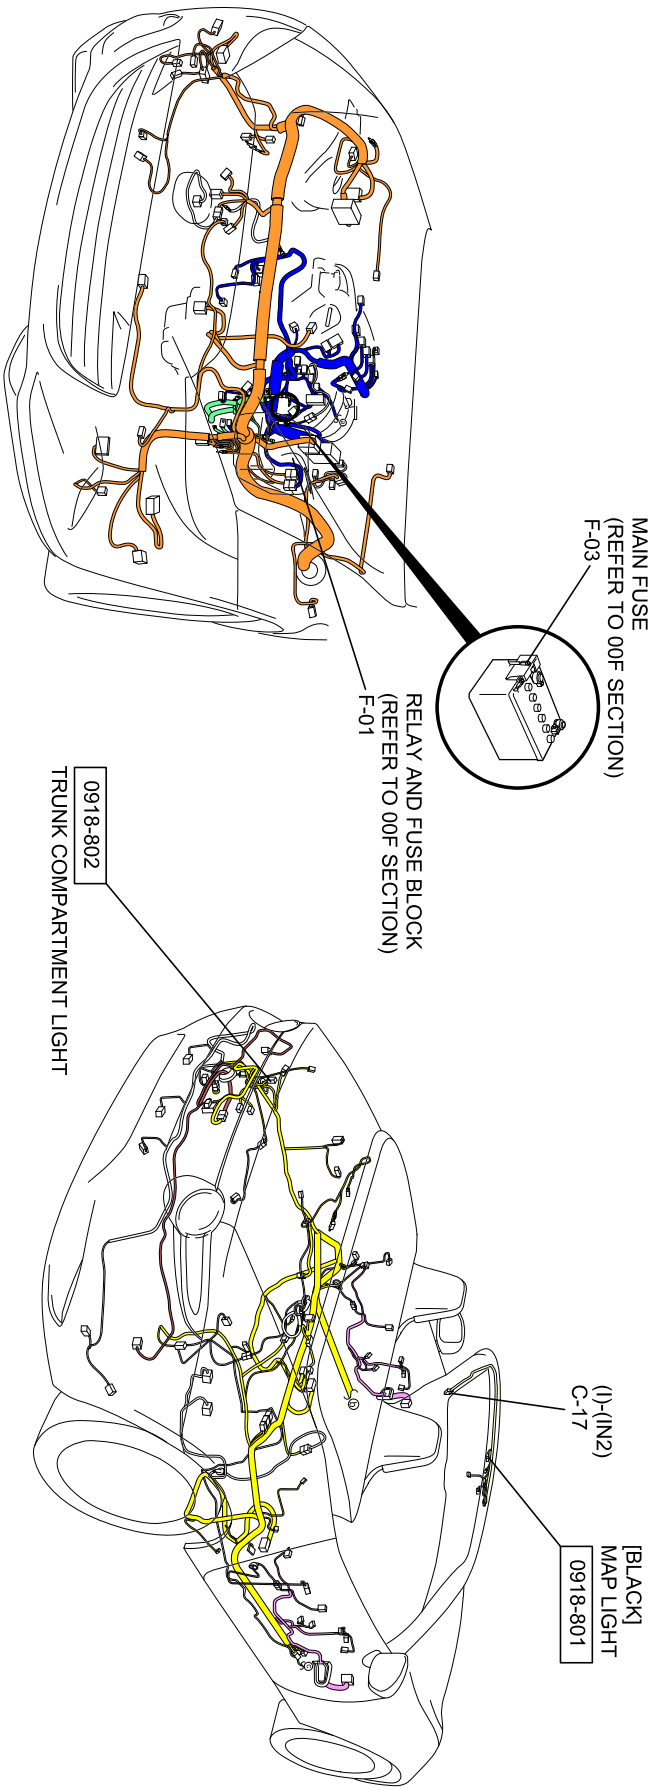

- : FRONT HARNESS
- : ENGINE HARNESS
- : ENGINE No.2 HARNESS
- : REAR HARNESS
- : REAR No.4 HARNESS
- : INSTRUMENT PANEL HARNESS
- : EMISSION HARNESS
- : DOOR HARNESS
- : INTERIOR LIGHT No.2 HARNESS