


777


G08 G08

<p>0920-201A CONNECTIVITY MASTER UNIT</p>	<p>0920-201B CONNECTIVITY MASTER UNIT</p>	<p>0920-201E CONNECTIVITY MASTER UNIT</p>	<p>0920-215 GPS ANTENNA</p>
<p>0922-201 CLOCK SPRING</p>	<p>0922-202 CRUISE CONTROL SWITCH / CLOCK SPRING / STEERING SWITCH</p>	<p>0940-103A START STOP UNIT</p>	

Start stop unit terminal voltage table (reference)

Terminal	Measurement conditions	Voltage (V)
	Up switch is pressed	1.0 or less
1AA	Down switch is pressed	Approx. 1.2
	INFO button is pressed	Approx. 2.2
	Except above	Approx. 3.3
1AB	Under any condition	1.0 or less

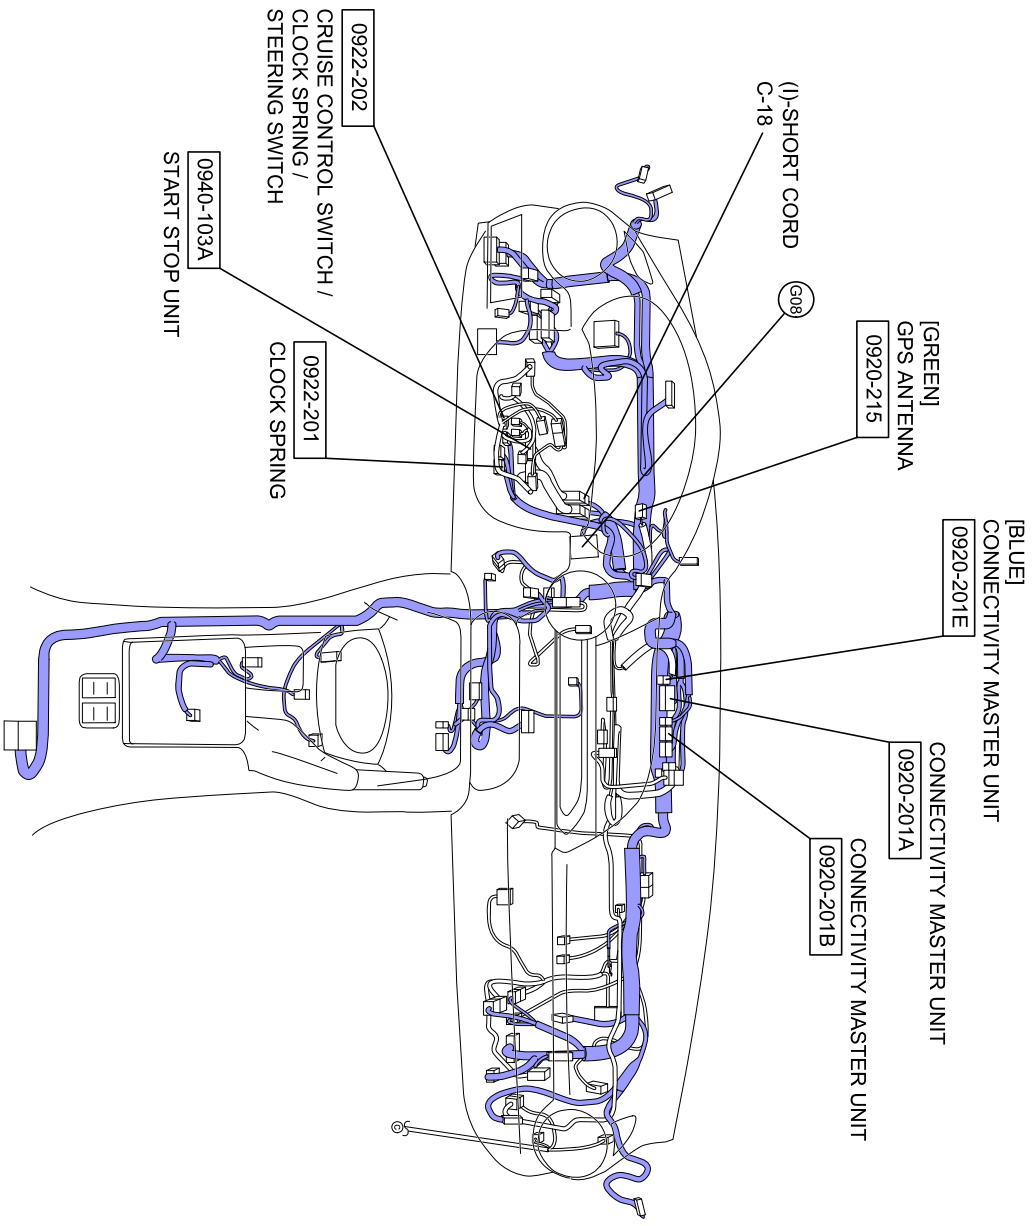

 : INSTRUMENT PANEL HARNESS