



777

| | | | | |
|---|---|-------------------------------------|-------------------------------------|---|
| <p>0920-301B CONNECTIVITY MASTER UNIT</p> | <p>0920-301C CONNECTIVITY MASTER UNIT</p> | <p>0920-304A CENTER DISPLAY</p> | <p>0920-304B CENTER DISPLAY</p> | <p>0940-102B ELECTRICAL SUPPLY UNIT (ESU)</p> |
|---|---|-------------------------------------|-------------------------------------|---|

Electrical supply unit (ESU) Terminal Voltage Table (Reference)

| Terminal | Measurement condition | Voltage (V) |
|----------|--|---|
| 2B | Under any condition | B+ |
| 2D | Ignition is switched ON (engine off or on) | Voltage changes according to the tester specification, therefore determination is not possible. |
| | Light switch is in ON position | B+ |
| 2D | Light switch is in OFF position | Voltage changes according to the tester specification, therefore determination is not possible. |
| | Light switch is in OFF position | B+ |

