


**Start stop unit terminal voltage table (reference)**

| Terminal | Measurement conditions | Voltage (V) |
|----------|------------------------|-------------|
| 1AA      | Up switch is pressed   | 1.0 or less |
| 1AA      | Down switch is pressed | Approx. 1.2 |
| 1AA      | INFO button is pressed | Approx. 2.2 |
| 1AA      | Except above           | Approx. 3.3 |
| 1AB      | Under any condition    | 1.0 or less |

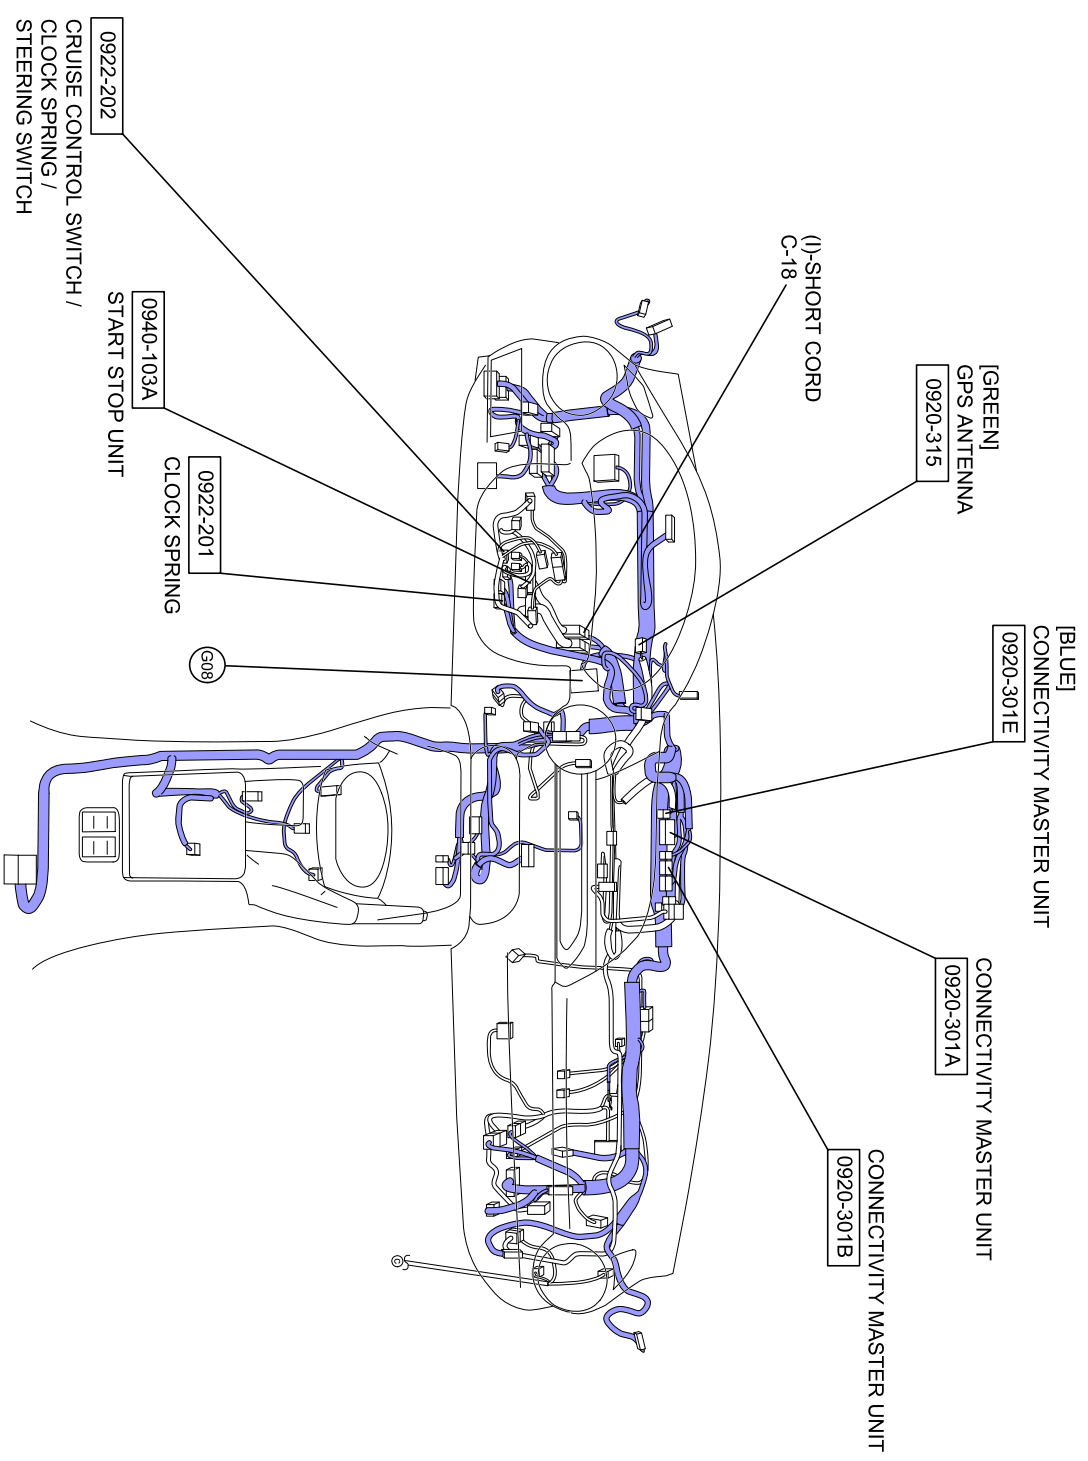

 : INSTRUMENT PANEL HARNESS