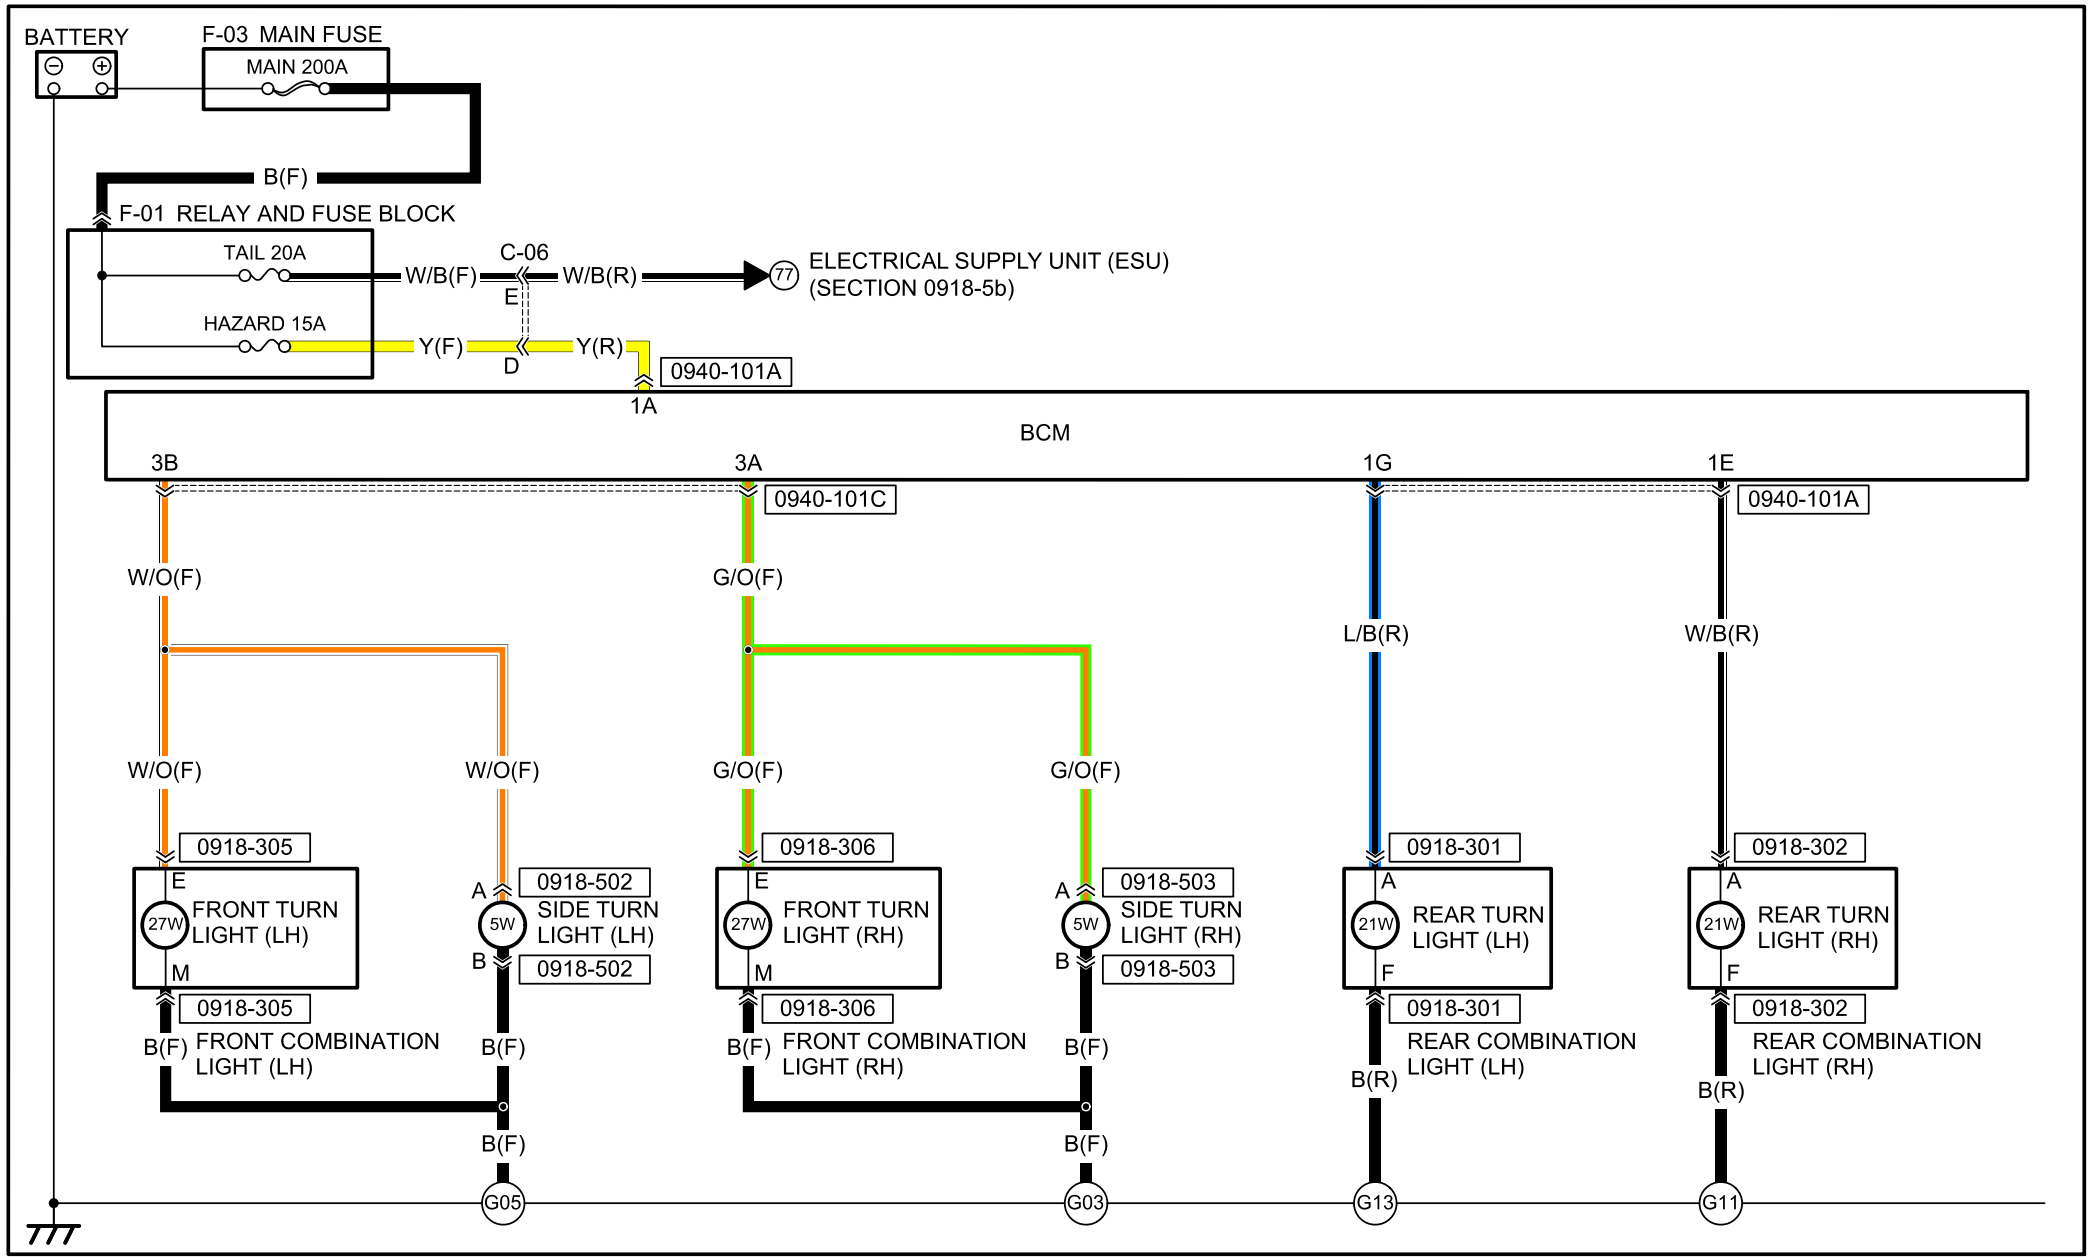
BATTERY
F-03 MAIN FUSE
MAIN 200A
B(F)
F-01 RELAY AND FUSE BLOCK
TAIL 20A
HAZARD 15A
C-06
W/B(F)
W/B(R)
E
Y(F)
Y(R)
D
77
ELECTRICAL SUPPLY UNIT (ESU)
(SECTION 0918-5b)
0940-101A
1A
BCM
3B
3A
1G
1E
0940-101C
0940-101A
W/O(F)
G/O(F)
L/B(R)
W/B(R)
0918-305
0918-306
0918-301
0918-302
E
M
27W
FRONT TURN
LIGHT (LH)
FRONT TURN
LIGHT (RH)
A
B
5W
0918-502
SIDE TURN
LIGHT (LH)
0918-503
SIDE TURN
LIGHT (RH)
21W
REAR TURN
LIGHT (LH)
REAR TURN
LIGHT (RH)
F
FRONT COMBINATION
LIGHT (LH)
FRONT COMBINATION
LIGHT (RH)
REAR COMBINATION
LIGHT (LH)
REAR COMBINATION
LIGHT (RH)
B(R)
G05
G03
G13
G11

0918-502
SIDE TURN LIGHT (LH)

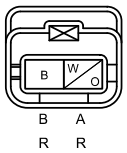

0918-301
REAR COMBINATION LIGHT (LH)

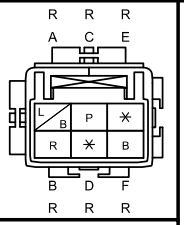

0918-305
FRONT COMBINATION LIGHT (LH) / HEADLIGHT LEVELING ACTUATOR (LH) / SWIVEL ACTUATOR (LH)

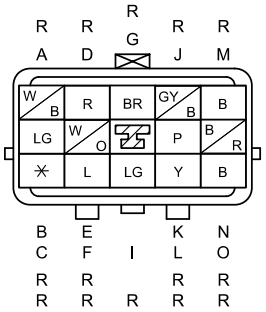

0918-306
FRONT COMBINATION LIGHT (RH) / HEADLIGHT LEVELING ACTUATOR (RH) / SWIVEL ACTUATOR (RH)

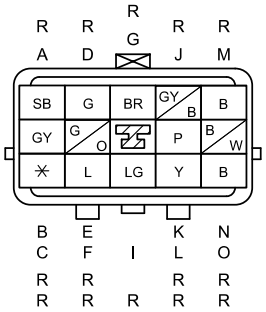

0940-101A
BCM

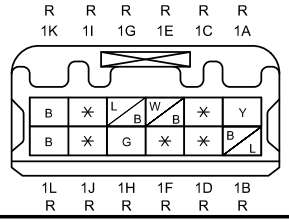

0918-503
SIDE TURN LIGHT (RH)

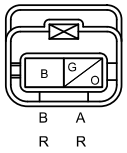

0918-302
REAR COMBINATION LIGHT (RH)

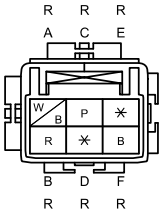

0940-101C
BCM

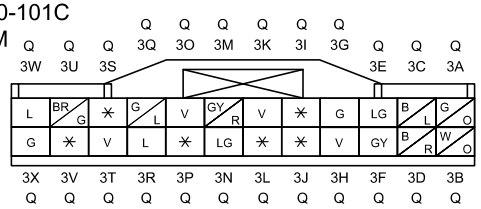

Body control module (BCM) terminal voltage table (reference)

Terminal	Measurement condition		Voltage (V)
1A	Under any condition		B+
1E	Ignition is switched ON (engine off or on)	Turn switch is in right turn position	1.0 or less ↔ B+
		Turn switch is in position other than above	1.0 or less
1G	Ignition is switched ON (engine off or on)	Turn switch is in left turn position	1.0 or less ↔ B+
		Turn switch is in position other than above	1.0 or less
3A	Ignition is switched ON (engine off or on)	Turn switch is in right turn position	1.0 or less ↔ B+
		Turn switch is in position other than above	1.0 or less
3B	Ignition is switched ON (engine off or on)	Turn switch is in left turn position	1.0 or less ↔ B+
		Turn switch is in position other than above	1.0 or less

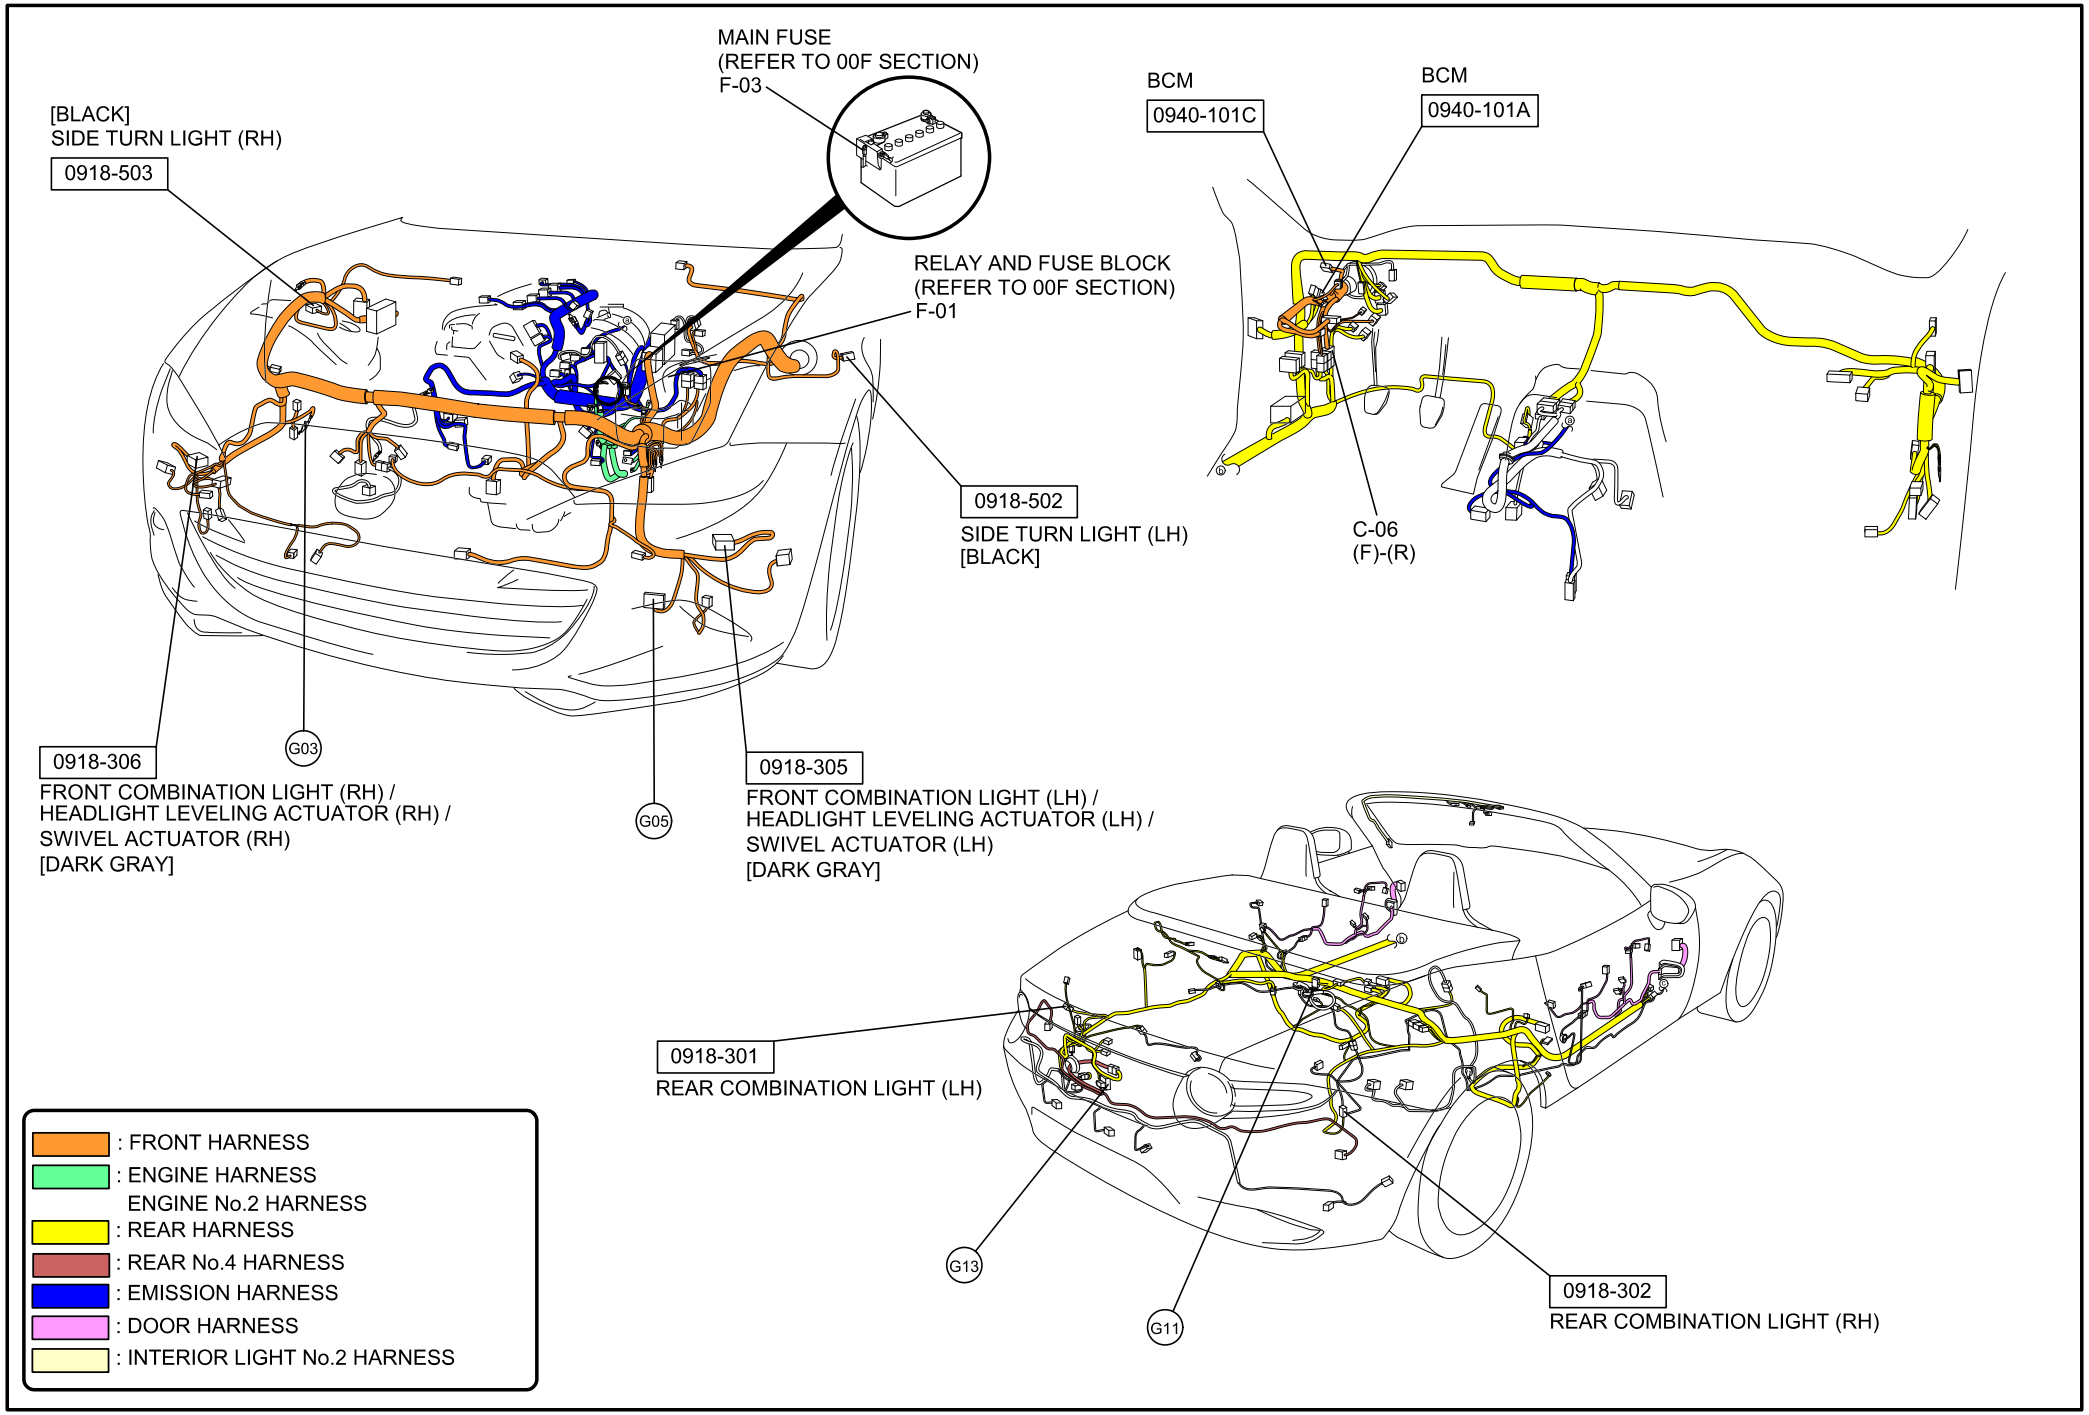
MAIN FUSE
(REFER TO 00F SECTION)
F-03
[BLACK]
SIDE TURN LIGHT (RH)
0918-503
RELAY AND FUSE BLOCK
(REFER TO 00F SECTION)
F-01
0918-502
SIDE TURN LIGHT (LH)
[BLACK]
BCM
0940-101C
BCM
0940-101A
C-06
(F)-(R)
0918-306
FRONT COMBINATION LIGHT (RH) /
HEADLIGHT LEVELING ACTUATOR (RH) /
SWIVEL ACTUATOR (RH)
[DARK GRAY]
G03
G05
0918-305
FRONT COMBINATION LIGHT (LH) /
HEADLIGHT LEVELING ACTUATOR (LH) /
SWIVEL ACTUATOR (LH)
[DARK GRAY]
0918-301
REAR COMBINATION LIGHT (LH)
G13
G11
0918-302
REAR COMBINATION LIGHT (RH)
: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: REAR No.4 HARNESS
: EMISSION HARNESS
: DOOR HARNESS
: INTERIOR LIGHT No.2 HARNESS