

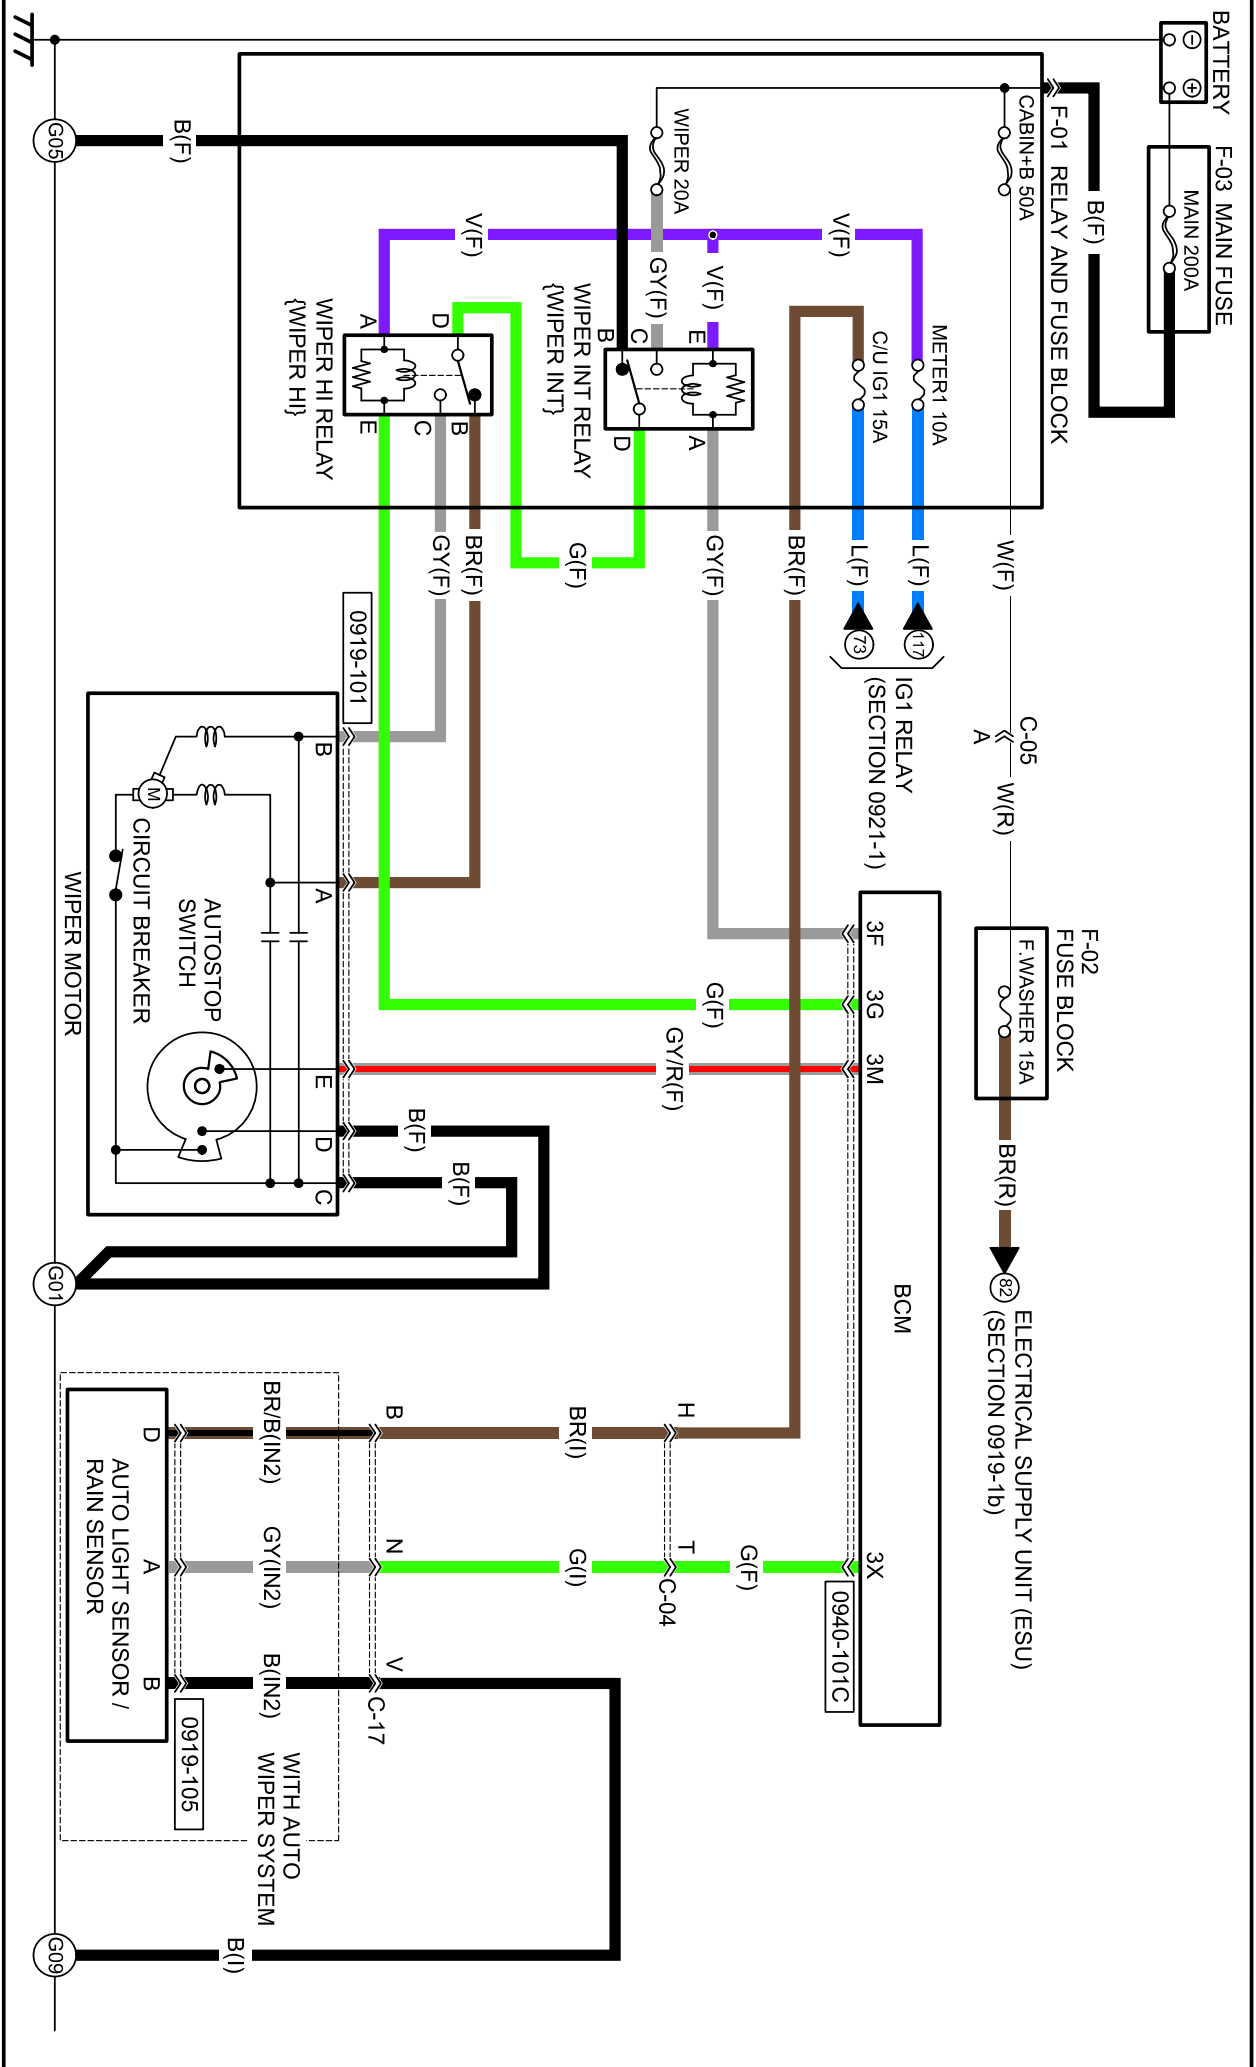
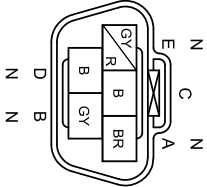
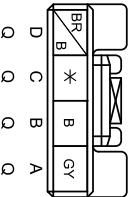
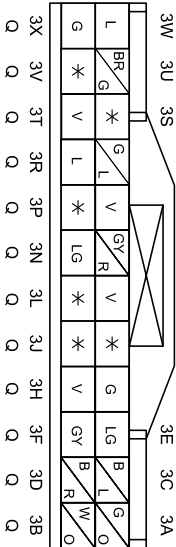
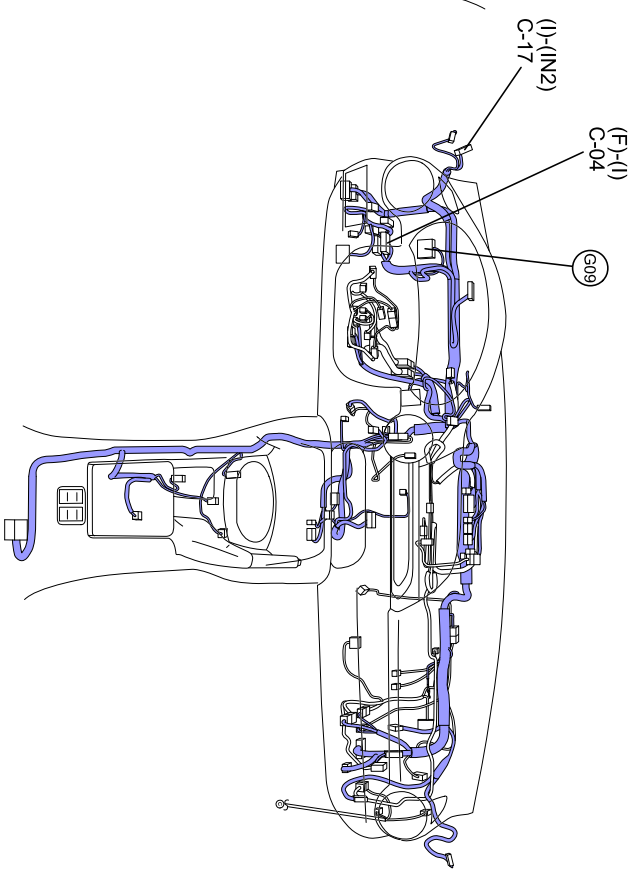


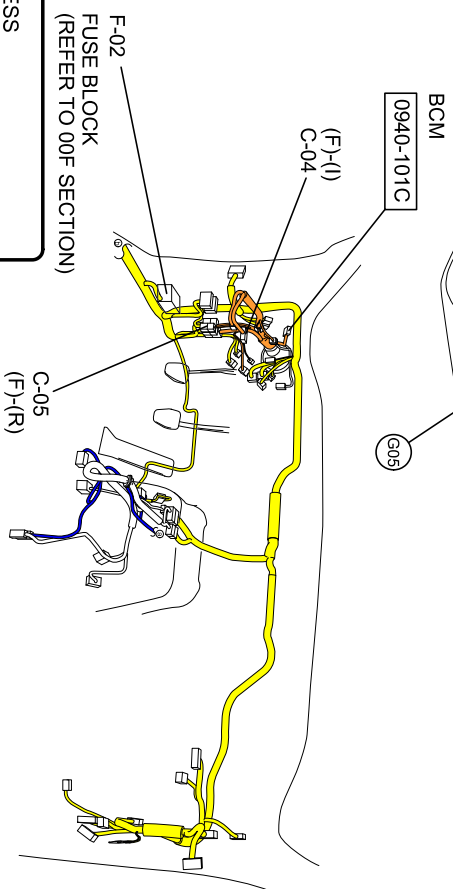

0919-101 WIPER MOTOR	0919-105 AUTO LIGHT SENSOR / RAIN SENSOR	0940-101C BCM			
					

Body control module (BCM) terminal voltage table (reference)				
Terminal	Measurement condition			Voltage (V)
3F	Ignition is switched ON (engine off or on)	Windshield wiper switch is in position other than OFF	1.0 or less	
		Windshield wiper switch is in OFF position	B+	
		Windshield wiper switch is in HLGH position	1.0 or less	
3G	Ignition is switched ON (engine off or on)	Windshield wiper switch is in OFF position	B+	
		Wiper switch is on and wiper is operating	1.0 or less	
3M	Ignition is switched ON (engine off or on)	Wiper switch is off	B+	
3X		Terminal used for communication therefore determination based on terminal voltage is not possible.		

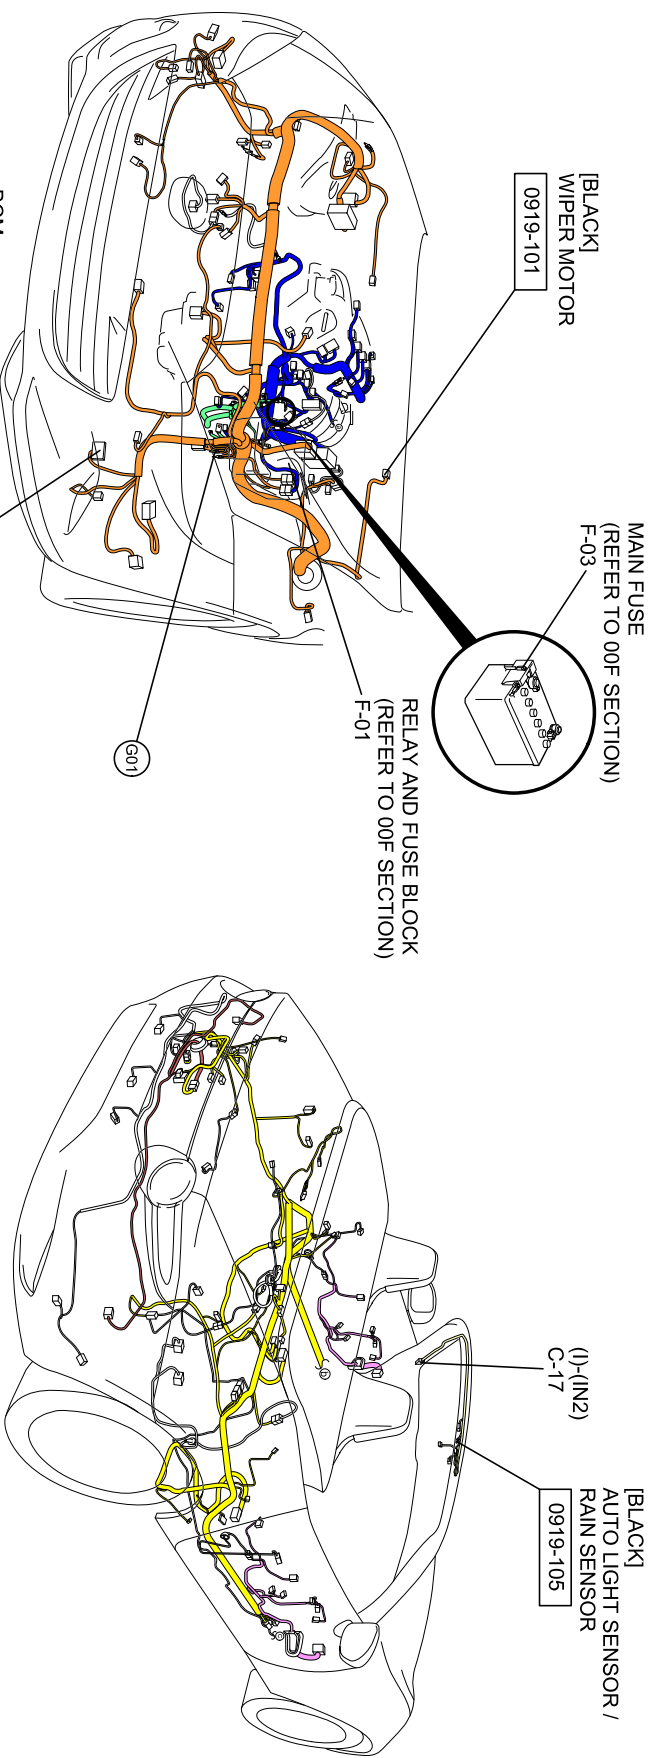

- FRONT HARNESS
- ENGINE HARNESS
- ENGINE No.2 HARNESS
- REAR HARNESS
- REAR No.4 HARNESS
- INSTRUMENT PANEL HARNESS
- EMISSION HARNESS
- DOOR HARNESS
- INTERIOR LIGHT No.2 HARNESS